



**PROFESSIONAL SIX-CHANNEL AUDIO
MIXER WITH USB INTERFACE,
BLUETOOTH, AND DSP SOUND EFFECTS**

AMX7322 OWNER'S MANUAL



Thank you for purchasing the **Audio2000's®** professional six-channel audio mixer with USB interface, Bluetooth, and DSP sound effects! For the best results and the utmost satisfaction from your new unit, please read this manual thoroughly, and retain it for future reference. For more information, please visit our website (www.audio2000s.com).



CONTENTS

| | |
|-----------------------------|-----|
| Warning..... | 1-2 |
| Precautions..... | 3 |
| Package Contents | 4 |
| Features..... | 4 |
| Functions and Controls..... | 4-6 |
| Specifications..... | 7 |
| Troubleshooting..... | 8 |
| Service Information..... | 9 |

WARNING

* TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

* THIS APPLIANCE SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING WATER AND THAT NO OBJECT FILLED WITH LIQUIDS SUCH AS VASES SHALL BE PLACED ON APPARATUS.

| | | |
|---|---|---|
|  <p>This lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p> | <p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Warning: To reduce the risk of electric shock, do not remove cover (or back) no user-serviceable parts inside. Refer servicing to qualified service personnel.</p> |  <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p> |
|---|---|---|

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Grounding or Polarization This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 16) Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 17) The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

PRECAUTIONS

On Safety

- * Operate only on designated AC power supply (120V AC in North America).
- * Should any liquid or solid object fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- * Unplug the unit from the wall outlet or set the Master switch to OFF if it is not to be used for several days.
- * To disconnect the cord, pull it out by the plug. Never pull the cord itself.

On Installation

- * Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation holes.
- * Do not install the unit in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.

On Repackaging

Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it as it was originally packed at the factory.

PACKAGE CONTENTS


| Items | Quantities |
|---------------------------------------|------------|
| AMX7322 Six-Channel Audio Mixer | 1 |
| Multi-Voltage AC/DC Power Supply Cord | 1 |
| Owner’s Manual | 1 |

FEATURES

- 1. 6-Channel Audio Mixer
- 2. Built-in USB Interface to Computer for Recording and Music Playing Applications
- 3. Built-in DSP Sound Effects Processor
- 4. Built-in Bluetooth Interface
- 5. Built-in MP3 Player Supporting a Variety of Music Formats
- 6. Microphone + Stereo Line Inputs
- 7. Ultra-Musical 3-Band EQ on All Channels
- 8. LED Display for Showing the Playing Status
- 9. Peak LED Indicators on All Channels
- 10. High-Accuracy Level Indicator
- 11. Phantom Power Switch (+48V)
- 12. Sealed Rotary Control Knobs to Resist Dust and Grime
- 13. Rugged Steel Chassis
- 14. Multi-Voltage Power Supply for Worldwide Use


FUNCTIONS AND CONTROLS

CHANNEL INPUT




- 1. **[MIC] Input Jack** --- This is a balanced XLR microphone input jack. This XLR input jack is to be connected to a microphone through a balanced microphone cable with a male XLR plug.
- 2. **[LINE] Input Jack** --- This is an unbalanced 1/4" input jack. This 1/4" input jack is to be connected to a microphone, a musical instrument, or an audio device (such as CD player) through an unbalanced cable with a 1/4" TS plug.
- 3. **[INSERT] Jack** --- This is a 1/4" TRS phone jack allowing you to insert external line devices (such as gating, compressing, equalizing, and / or reverb effects) into the signal path. This insert jack is configured with "TIP" send and "RING" return.
- 4. **[GAIN] Control Knob** --- This knob is used to raise or lower the gain level of the input signal. When the audio level is higher than a predetermined threshold, the [PEAK] LED indicator (refer to numeral 9) will keep blinking until the audio level goes below the threshold.
- 5. **[HIGH] Treble-tone Control Knob** --- This knob is used to adjust the gain for the input signal band centered at 12.5KHz in the range from -15dB to +15dB.
- 6. **[MID] Alto-tone Control Knob** --- This knob is used to adjust the gain for the input signal band centered at 2.5KHz in the range from -15dB to +15dB.
- 7. **[LOW] Bass-tone Control Knob** --- This knob is used to adjust the gain for the input signal band centered at 80Hz in the range from -15dB to +15dB.
- 8. **[FX] Control Knob** --- This knob is used to adjust the level of the signal routed from this channel to the reverberation line. This signal level will vary according to the settings of the channel attenuators (HIGH, MID, LOW). The signals from the stereo channel (R and L) will be mixed before being routed to the reverberation line.
- 9. **[PEAK] LED Indicator** --- This PEAK LED indicator will keep blinking when the input signal level is higher than a predetermined threshold. When the PEAK LED indicator is blinking, adjust the gain control knob (refer to numeral 4) to a lower gain level until the PEAK LED indicator stops blinking to maintain the sound quality.
- 10. **[LEVEL] Control Knob** --- This knob is used to raise or lower the audio volume of the signal from this channel.

MAIN CONTROLS

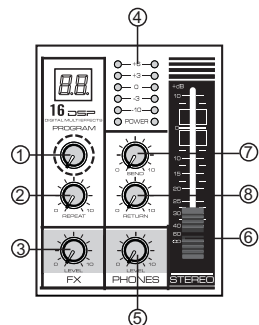

- [PROGRAM] Controller** --- This knob is used to select one of the sixteen built-in sound effect modes. The selected sound effect will be applied to both the left channel and the right channel simultaneously.
- [REPEAT] Echo Control** --- Use this control to adjust the REPEAT setting of the echo effect. As REPEAT adjusts the total number of echo intervals prior to fade-out, the more REPEAT that is applied, the more echo intervals will occur prior to fade-out. Turn control clockwise to increase and counter-clockwise to decrease level.
- [FX LEVEL] Control** --- This controls the amount of echo effect (sound effect) that will be heard. Turn clockwise to increase the amount of echo and counter-clockwise to decrease it. Turn this control fully counter-clockwise to turn the sound effect off.
- Stereo Signal Level Meter** --- This is a stereo signal level meter configured with three green LED lights at the bottom, one yellow LED light at the middle, and one red LED light at the top on both the left channel side and the right channel side. When the red LED light is turned on frequently, the [MAIN OUT] output signal level may need to be lowered by adjusting the [STEREO] level fader (refer to numeral 6). The red POWER LED indicator lights are placed below the green level meter LED lights.
- [PHONES] Level Control** --- This control is used to adjust the earphone volume.
- [STEREO] Level Fader** --- This level fader is used to adjust the [MAIN OUT] output (refer to numeral 3 in Section MAIN TERMINALS) signal volume.
- [SEND] Level Control** --- This control is used to adjust the signal level from the [SEND] output jack (refer to numeral 8 in Section MAIN TERMINALS).
- [RETURN] Level Control** --- This control is used to adjust the signal level to the [RETURN] input jack (refer to numeral 8 in Section MAIN TERMINALS).


MAIN TERMINALS

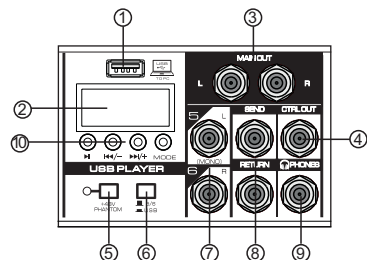

- USB interface** --- This can be used as an MP3 input or a computer connection. The volume and sound quality of the audio signal from the USB interface are controlled by the control knobs of the [5/6 USB] channel.
- USB Interface Display** --- This displays the status and the details of the USB interface operation.
- [MAIN OUT] Stereo Output Jacks** --- These are stereo main output 1/4" TS jacks. These jacks are to be connected to power amplifiers or active speakers.
- [CTRL OUT] Output Jack** --- This jack is a 1/4" TRS jack and is used as a monitor output.
- [+48V PHANTOM] Button/LED** --- When one or more condenser microphones are connected to the XLR [MIC] input jacks (refer to numeral 1 in the CHANNEL INPUT section), press this [+48V PHANTOM] button to turn on the 48V phantom power to the condenser microphones via the XLR [MIC] input jacks. When the 48V phantom power is turned on, the phantom power LED light will be turned on.
- [5/6][USB] Selection Button** --- Press down this button to select the stereo channel [5/6]. When this button is depressed, press this button again to raise the button to select the USB input.
- [5/6] Stereo Input Jacks** --- These are the 1/4" TS input jacks for channel 5 and channel 6. Channel 5 is utilized as the left channel while channel 6 is utilized as the right channel in the stereo mode. If only one 1/4" TS plug is connected to channel 5 and the channel 6 input jack is not connected, the mono audio signal to channel 5 will be routed to channel 6 simultaneously, such that both channel 5 and channel 6 carry the same mono audio signal.
- [SEND & RETURN] Jacks** --- Both the [SEND] and the [RETURN] jacks are 1/4" TS jacks. The [SEND] output can be utilized alone as a monitoring signal to a power amplifier or an active speaker. The [RETURN] input jack can be utilized alone as an input jack connecting to an external sound source. External line devices (such as gating, compressing, equalizing, and /or reverb effects) can be inserted into the signal path between the [SEND] output jack and the [RETURN] input jack to provide the desired sound effects.

- [PHONES] Stereo Output Jack** --- This is a 1/4" TRS jack for the stereo monitoring earphones.
- [USB PLAYER] Controls** --- There are four buttons to control the USB interface and the Bluetooth pairing. (refer to the USB AND BLUETOOTH section for details).

POWER SUPPLY

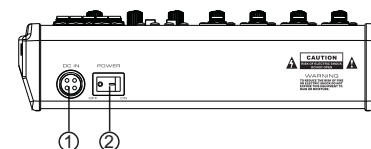

- [DC IN] Power Supply Socket** --- A supplied AC/DC power supply cord is to be connected to this [DC IN] power supply socket, supplying DC+15V, DC-15V, DC+48V, and ground.
- [POWER] Switch** --- This is an ON/OFF power switch.

USB AND BLUETOOTH

- [USB PLAYER] Button Function**
 - Play/Pause Button** --- Press this button to start playing the music from the USB device connected to the USB interface (refer to numeral 1 in the MAIN TERMINAL section on page 5). Press this button again to have the music paused. When the music is paused, press this button again to continue the music from where it was paused.
 - Prev/Vol- Button** --- When the USB device is in use, press this button to skip the current track and jump to the previous track. Press and hold this button to lower the sound level.
 - Next/Vol+ Button** --- When the USB device is in use, press this button to skip the current track and jump to the next track. Press and hold this button to raise the sound level.
 - [MODE] Button** --- This button is used to select the input source to the USB interface. The input sources include the USB device (with the icon [USB]), a computer (with the icon [REC]), and the built-in Bluetooth (with the icon [BT]). The input source is selected in the order of "USB-REC-BT".
 - BLUETOOTH CONNECTION** --- On the [USB PLAYER] control panel (refer to numeral 10 in the MAIN TERMINAL section on page 6), press the "MODE" button to the "BT" icon. While the "BT" icon is flashing, open the Bluetooth function in your digital device and select the "KT-08UP" for pairing.
 - Recording Operation via USB Interface**
 - Press the MODE button to the "REC" icon.
 - Press the "▶" button to start recording and the USB Interface Display (refer to numeral 2 in the MAIN TERMINAL section on page 5) will show the recording time. While the recording is in progress, press the "▶" button again to pause recording.
- NOTE: After a computer is connected to the USB interface, the computer will install the built-in driver automatically when it is connected the first time. Prior to playing or recording music, please wait until the driver installation is completed.

SPECIFICATIONS

| | | |
|-----------------------|---|---|
| INPUT CHANNELS | MONO: MIC/LINE | 4 |
| | STEREO: LINE | 1 |
| | USB SOUND CARD | 1 |
| | MP3 | 1 |
| OUTPUT CHANNELS | STEREO OUT | 1 |
| | PHONES | 1 |
| | RETURN | 1 |
| BUS | STEREO | 1 |
| | SEND | 1 |
| INPUT CHANNEL | PAD | 26dB |
| FUNCTION | EQ | HIGH: Gain +15dB/-15dB, Frequency: 12KHz Shelving MID: Gain +15dB/-15dB, Frequency: 2.5KHz Shelving LOW: Gain +15dB/-15dB, Frequency: 80Hz Shelving |
| | PEAK LED | LED turns on when post EQ signal reaches 3dB below clipping point |
| LEVEL METER | 2*5-Segment LED Meter (+6, +3, 0, -3, -10 dB) | |
| EFFECTS | Built-in | |
| PHANTOM POWER VOLTAGE | +48V | |
| POWER INPUT | $\pm 15\text{VDC}$ +48VDC | |
| POWER CONSUMPTION | 14W | |

TROUBLESHOOTING

Should problems occur, they are, in many cases, due to simple operation mistakes or the like. On the basis of the following checks, you will be able to rectify a number of problems yourself without difficulty. If the problem cannot be remedied after the following checks, please consult your dealer.

| PROBLEM | POSSIBLE CAUSES | SOLUTIONS |
|----------------------------|---|--|
| Power can not be turned on | Power Supply cord was not connected or was not connected securely. | Securely connect the power supply cord to the mixer DC input and/or the AC power outlet. |
| | The power supply cord is defective. | Replace the power supply cord. |
| | The AC power outlet has no power. | Connect the power supply to an AC power outlet with proper power. |
| | The AC power source is from an AC power extension cord and the power switch of the extension cord is not turned on. | Turn on the power switch of the AC power extension cord. |
| No output sound | The power is off. | Turn on the power. |
| | The stereo level fader was turned to minimum. | Adjust the stereo level fader to have an optimal output level. |
| | The main output audio cable is missing or defective. | Connect, repair or replace the audio cables. |
| One channel no sound | The gain control knob to the channel was turned to minimum. | Adjust the gain control knob to that channel to have an optimal output level. |
| | The level control knob to the microphone channel was turned to minimum. | Adjust the level control knob to that channel to have an optimal output level. |
| Microphone no sound | No phantom power to the condenser microphone | Turn on the phantom power. |
| | The gain control knob to the microphone channel was turned to minimum. | Adjust the gain control knob to that microphone channel to have an optimal microphone output level. |
| | The level control knob to the microphone channel was turned to minimum. | Adjust the level control knob to that microphone channel to have an optimal microphone output level. |
| Distorted sound | The amplitude of the input signal is over the threshold. | Adjust the gain control knob to lower the input gain. |
| | The amplitude of the main output signal is over the threshold of the connected amplifiers or active speakers. | Adjust the stereo level fader to lower the main output level. |

SERVICE INFORMATION

SHIPPING DAMAGE

If the shipping carton is found to be damaged, notify the delivery company immediately. Save the damaged carton as evidence for the delivery company to inspect. It is the responsibility of the consignee to file a claim with the delivery company for any damaged that occurs during shipping. In the case that the shipping carton is in good condition but the unit is damaged or defective, call **Audio2000'S®** at 805/523-2759.

FACTORY SERVICE

If the equipment needs factory service, call **Audio2000'S®** at 805/523-2759 for a Return Authorization number (RA number) and the address of the authorized service representatives. Insure and ship the product, prepaid, in its original carton along with proof of purchase in the form of a bill of sale or receipted invoice to the above address. Please clearly write the RA number on the shipping carton. Also enclose a note describing the problem along with any other helpful information such as where and how the unit was used.

LIMITED WARRANTY

H&F Technologies, Incorporated (H&F) hereby warrants that **Audio2000'S®** products will be free from defects in material and workmanship for a period of 1 (one) year from date of purchase. At its option, H&F will repair or replace the defective product and promptly return it to you.

The Limited Warranty will not cover any item that has been, in H&F's estimation, subject to alteration, misuse, neglect, accident or improper installation. In addition, any service not performed by H&F or an authorized service center will terminate terms of this warranty. Normal wear and tear of this product will not be covered by this or any implied warranty.

No liability will be accepted for damages/loss directly caused from the use of this product. H&F's liability shall be limited to the repair/replacement of this product if found to be defective.

© 2017 H & F Technologies, Incorporated (website: www.audio2000s.com)